(((O)) **ecopoint** | Product Instructions




Tri-Proof Plus

IMPORTANT:

FOR YOUR SAFETY AND THE LONG-TERM RELIABILTY OF THIS PRODUCT, READ AND FOLLOW ALL INSTRUCTIONS TO PREVENT HARM TO THE LUMINAIRE, INSTALLER OR PROPERTY.

- * Installation requires knowledge of electrical and luminaire systems; installation must only be completed by a licenced or suitably qualified electrician.
- * Disconnect power before installation.
- * Do not alter pre-existing holes or drill new holes unless instructed to do so according to this manual.
- * Do not expose wiring to sharp objects or edges of sheet metal, always check clearances prior to any drilling and de-burr edges.
- No components of this luminaire are serviceable by the user, and there is danger of personal and/or property harm if the luminaire is modified or disassembled.
- * If any luminaire components are damaged, they shall be exclusively replaced by the manufacturer or approved agent.

DIMENSIONS:

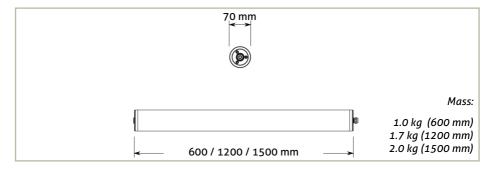

STANDARD SPECIFICATIONS

Power Factor	≥ 0.93 (230V)	
Electrical Input	220-240 V / 50-60 Hz	
Operating Temperatures	- 20 to +40 deg. C	
Construction	PMMA or PC body, 316 stainless steel brackets	
Ingress Protection	IP67 + IP69K	
Impact Protection	IK09 (PMMA) / IK10 (PC)	
Warranty	3 years (PMMA) / 5 years (PC)	

STANDARD MODELS

Product Code	Size	Power	Nominal Flux
ETP600S20W840-PM ETP600S20W840-PC	600 x Ø70 mm	20 W	2,240 lm
ETP1200S36W840-PM ETP1200S36W840-PC	1200 x Ø70 mm	36 W	4,300 lm
ETP1500S48W840-PM ETP1500S48W840-PC	1500 x Ø70 mm	48 W	5,810 lm

 
INSTALLATION NOTES:

The following notes must be considered prior to installation of the product:

- * The luminaire has been designed to operate in accordance with the specifications listed above; please especially note the electrical input, operating temperature and ingress/impact protection specifications and ensure that the luminaire will only be operated within a suitable environment.
- * The luminaire must be securely fixed to a suitable surface or structure which is able to bear the luminaire weight and provide the necessary restraint under seismic loading according to NZS 4219.
- * The luminaire must be installed such that adequate space is available for ventilation to prevent overheating.
- * Exposure to UV (i.e. direct sunlight) over an extended period may cause discolouration of the diffuser and/or luminaire body.
- * The luminaire is not suitable for marine environments nor for hazardous environments.




SURFACE MOUNTED INSTALLATION





Ensure power is turned off and remove luminaire from packaging. Accurately mark and screw hole.

 SUSPENDED INSTALLATION



Ensure power is turned off and remove luminaire from packaging. Accurately mark and screw hole.

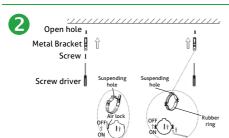

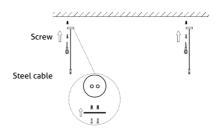


Screw the clip on the ceiling tightly.

Screw the steel cable onto the ceiling.



Install the lamp into the clips, adjust the position of the fixture and clean it.

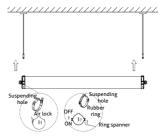

Hung the fixture under the steel cable and secure the fixture by steel cable







Connect power to mains supply and test the luminaire for correct operation and switching.

Connect power to mains supply and test the luminaire for correct operation and switching.

MAINTENANCE:

- * To avoid risk of harm to the luminaire or maintenance personnel, always ensure that the luminaire is switched off and cooled down prior to undertaking any maintenance activities.
- * If maintenance tasks involve exposing any electrical components, ensure that mains power is disconnected prior to any works.
- * This product should only be cleaned with a damp cloth; do NOT use any chemical cleaning agents and/or solvents.
- ★ If dust accumulates on the inside of the diffuser, simply slide the end-caps of the luminaire body off, slide the diffuser out, wipe down with a damp cloth and allow to dry before reversing the process. CARE MUST BE TAKEN TO NOT TOUCH ANY LEDS AND NOT ALLOW ANY MOISTURE TO COME IN CONTACT WITH THE LEDS
- * REMINDER: No components of this luminaire are serviceable by the user,; damaged components may only replaced or repaired by the manufacturer or approved agent.

WARRANTY COVER:

Ecopoint Limited guarantees this luminaire to be free from failures resulting from faulty materials or workmanship for a period of 3 years (PMMA) /5 years (PC) from the date of invoice. Retain the invoice as proof of purchase in the event of a warranty claim.

Failure resulting from misuse, accident, neglect or improper operation, maintenance, installation, modification or adjustment are not covered by this warranty.

Ecopoint Limited must be notified within 30 days of the alleged defect being first identified

Please refer to standard Warranty Terms and Terms and Conditions of Sale for full detail; these are available at www.ecopoint.co.nz

CONTACT:

For any service or support enquiries, please call Ecopoint head office during normal business hours (Monday to Friday) or contact us via any of the means listed below.



Ecopoint Limited

2 Jarden Mile, Ngauranga, Wellington 6035 PO Box 12646, Thorndon, Wellington 6144

P: +64 4 499 3636 or 0800 695 949

E: info@ecopoint.co.nz W: www.ecopoint.co.nz

Ref: ETP Installation Instruction (20181221)